



# Twister Cash Cube Rental Instructions

## Set Up Instructions:

1. Roll the Cash Cube on its own wheels to desired location.
2. With two adults stand the unit upright, on level ground.
3. Remove bungee cords from wing sides and open wings to allow access to the cube door.
4. Unlatch the blower fan unit at the back/bottom and lower to ground.
5. Plug unit into wall socket. Use only HD extension cord if needed.
6. Pushing the red button on the control box will start the blower and let it run for 30 seconds per turn.
7. Lightly crumple cash or coupons and put them inside the cube. Paper left flat will not circulate well.
8. NOTE: A blindfold or goggles are required to participate in the Twister Cash Cube. This prevents any eye injury from flying objects.

## Operating Instructions:

1. Participant enters the cube and closes the door behind them.
2. Push the red button and blower starts. Never allow door to open while the blower is operating.
3. Participant has 30 seconds to grab all that they can.
4. When blower stops participant exits the cube.

## Returning the Cash Cube

All parts listed below must be returned in good working condition. Any parts missing or broken will be charged at the price listed.

<b>U</b>	<b>Qty</b>	<b>Item</b>	<b>Price</b>
'	1	Cash Cube	\$ 5,200.00



[www.partylandutah.com](http://www.partylandutah.com)

*Trouble shooting hints, power requirements, and additional copies of this form may be reprinted from the above website.*