



Shave Ice Machine Rental Instructions

Equipment Needed:

Shave Ice Machine
Drip Pan

Optional Supplies:

Ice cubes only (no block ice!)
Sno-Kone cups (6 oz.)
Syrup Mix
One Gallon Jugs (2 included with rental)
Syrup Pumps (2 included with rental)
Ice Storage Facilities (ice chest)

Set Up Instructions:

1. Place machine on a table in the shade to slow ice from melting.
2. Place drip pan on table with drain hole emptying into bucket or can.
3. Make sure all switches are in the off position and plug into a grounded 110 volt outlet (3 prong outlet). Do NOT alter plug to fit in a 2 prong receptacle--this could cause a **fire hazard** and/or damage to machine.)

Also: make sure **NOTHING ELSE** is plugged into the same circuit this machine is using. A circuit may have as many as 5-6 outlets connected to it in the electrical breaker box. **PLAN AHEAD!** At the same time, turn on this and all other electrical devices you will be using during your event and let them run for 5-10 minutes without “popping” off any breaker box switches. Make sure **before** your event so you don't have to move items around to different circuits **during** your event!

4. Try and plug machine directly into wall receptacle. If you **MUST** use an extension cord, **MAKE SURE IT IS A THICK TYPE, USUALLY ORANGE OR BLUE IN COLOR AND RATED FOR AT LEAST 20 AMPS.**
5. Open lid on top of machine and check for any foreign objects inside. Machine won't work while lid is open!
6. **NEVER** place anything but ice cubes into the top of the machine. Ice blades in this section of the machine are extremely sharp and can cut you.

Operating Instructions:

1. Make sure ice has had at least **ONE HOUR** to soften a little in an ice chest. **NEVER** use ice cubes taken directly from the freezer--this negatively affects the quality of the shaved ice and causes damage to the blade.
2. Lift lid and pour ice cubes inside to within 1/2" of the top of the chamber. Spread around ice evenly within each separate cavity.
3. Place cup under spout and turn rocker switch on right side of machine to the “ON” position and the machine will start shaving ice.
4. Continue shaving until proper serving size is attained.
5. Turn rocker switch to “off” position to stop.
6. Adjust blade with “adjustment” knob to achieve the preferred ice texture.

Cleaning the Machine

1. Unplug the machine and wipe off and dry power cord.
2. Completely wipe down outside of machine to clean off syrup spills, etc.
3. Rinse out jugs and pumps--use hot water.
4. Clean and dry drip pan.

IMPORTANT: A CLEANING FEE OF \$15.00 WILL BE CHARGED IF MACHINE IS RETURNED DIRTY!

Trouble Shooting:

1. Make sure machine is plugged into a working outlet. Also make sure breaker is on in breaker box. Sometimes multiple machines plugged into same outlet will “pop” the breaker and it may need to be re-set and machines moved around to different circuits.
2. Make sure the lid on the top of the machine is closed completely. Machine will not work while lid is open.
3. If items in #1 above have been checked, try pushing “IN” the red reset button on right side of machine by the power switch.
4. If rotating plate in top of machine won’t move, possibly too much ice was inserted. Slowly pour warm water on ice cubes until plate rotates freely.
5. This machine is equipped with a motor thermal protector. If machine gets too hot, the thermal switch may “trip” and machine will not work despite being turned “ON” and plugged in. It is recommended the cause of the power overload be found before continuing. Machine may need to cool before the reset button will take effect.

Do NOT attempt to repair machine in any way. Any damages to the machine due to such an attempt will be charged to you.

WARNING / DANGER

- To avoid serious injury, do NOT place hands inside the top of the machine.
- Do not place anything but ice in the machine.
- Machine must be properly grounded to prevent electrical shock to personnel.
- Do NOT immerse this equipment in water.
- Always unplug the equipment before cleaning or servicing.

Returning the Rental Item

All parts listed below must be returned in good working condition. Any parts missing or broken will be charged at the price listed.

U	Qty	Item	Price
'	1	Blade	\$ 22.95
'	1	Metal Tray	21.50
'	1	Shave Ice Machine	1,489.00

A Cleaning Fee of 15.00 will be assessed on any rental item that is not cleaned upon return.



www.partylandutah.com

Trouble shooting hints, power requirements, and additional copies of this form may be reprinted from the above website.